


Wallbands

To install wallbands

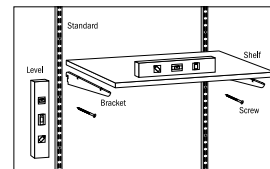

TOOLS NEEDED

level, power drill, drill bits, #2 Phillips head bit for a power drill, hammer, ladder or step stool




Step 1 Position one wallband where you want it on the wall. Mark the position of the second screw hole from the top of the wallband.



Step 2 Check with a level that the wallband is hanging in vertical position.



Step 3 Drill holes and fasten the remaining screws.

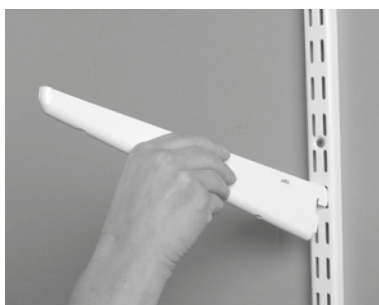

Step 4 Place a traditional bracket in the wallband.



Step 5 To install the next wallband, measure and mark out a suitable distance between the two wallband.



Step 6 Place a shelf on the brackets and check with a level that brackets are in level. Drill holes and fix the wallband with screws.



Step 7 Install all remaining shelves. Start from the top.

TIP Use a third wallband as a support during the installation. You may then use both hands for the installation work.

Mounting wallbands in a corner: Install the wallband approximately 2"/50 mm from the corner to allow enough room for the drill or screw-driver.

